

快速電熱水壺

使用說明書

CK-VAQ15

- 感謝您購買本產品。
- 請在使用前詳讀使用說明書，以便正確使用，並請妥善保管本說明書。

目錄

使用前

安全注意事項	2
各部位名稱和使用方法	4

使用方法

燒開水	7
注水	9
倒掉剩餘熱水時	10
關於防止空燒	10

清理

清理	11
檸檬酸清洗方法	12
更換內蓋墊圈	12
關於零件更換、購買	13

困惑時

商品Q&A	13
認為故障時	13
規格	15

●本產品為燒水專用，不具備保溫功能。

安全注意事項

務請遵守

為了防止給使用者或他人帶來危害及財產損害，特此說明務請遵守事項。

■將因錯誤操作而導致的危險及損害程度，按以下區分說明。



警告 表示如果操作有誤，可能會導致死亡或重傷的內容。



注意 表示如果操作有誤，可能會導致輕傷或房屋、財產等損害的內容。

■務請遵守的內容，按以下的區分予以說明。



不得進行的“禁止”內容。



務必實行的“指示”內容。



警告



請勿改造。除了本公司技術人員以外，請勿拆卸、修理。

否則，有火災、觸電、受傷之危險。需修理時，請洽詢購買店。

請勿浸水或濺水。請勿放在洗碗槽的台面上等潮濕的地方。

否則，會有短路、觸電之危險。

請勿讓本體連接部和電源座沾濕，或浸泡於液體中。

否則，會有短路、觸電之危險。

請勿用濕的手插拔電源插頭。

否則，有可能會導致觸電或受傷。

請勿觸摸出水口，勿將手、臉靠近。

否則，會導致燙傷。尤其應注意請勿讓嬰幼兒觸摸。

請勿用抹布等東西覆蓋在出水口上。

否則，熱水溢出，會導致燙傷。也可能會導致上蓋的變形、變色及故障。

請勿用力關閉上蓋。

否則，熱水溢出，會導致燙傷。

裝水請勿超過滿水標示。

否則，熱水溢出，會導致燙傷。



移動或倒水時，請勿抱產品或使其傾斜、晃動或手持上蓋。

否則，熱水流出，會導致燙傷。

請勿翻倒產品。

否則，熱水流出，會導致燙傷。

請勿使用交流220-230伏特以外的電源。

否則，會導致火災、觸電。

請勿讓嬰幼兒單獨使用，請勿放在嬰幼兒摸得到的地方。

否則，會有燙傷、受傷、觸電之危險。



電源線或電源插頭有損傷或電源插座鬆動時，請勿使用。

否則，會導致觸電、短路、著火。



電源線請勿受損。

電源線請勿割傷、損壞、過度彎曲、拉扯、扭轉、打結、或靠近高溫處。並請勿壓上重物、擠壓、或重新自行組裝。否則，電源線損傷，會導致火災、觸電。

請勿放入冰塊作為保冷使用。

否則會有結露現象，會導致觸電或發生故障。

請勿放置於火源（如瓦斯爐等）、電暖器、電磁爐等上方。

否則，會導致火災、故障。

請勿放入或煮水以外的東西。

否則，會導致氣泡、或因內容物溢出導致燙傷，還會導致注水管路堵塞，內容器燒焦、腐蝕。

●牛奶、酒、湯、備長炭、茶包、茶葉

●烹調速食食品

●調理包食品的加熱或將食材放入塑膠袋中加熱烹調

本體連接部、電源座連接部（金屬部分）請勿吸附金屬物或灰塵等。

否則，會導致觸電、短路、著火。

請勿將本體連接部、電源座連接部（金屬部分）放入口中。

否則，會導致觸電、受傷。特別是應注意請勿讓嬰幼兒放入口中。



內蓋墊圈有變硬、萎縮或顏色變白等老化情形時請更換。

否則，傾斜或不慎翻倒時，熱水流出會導致燙傷。蒸氣洩漏可能造成燙傷、故障。

需單獨使用額定10安培以上的電源插座。

若與其他器具共同使用，多孔插座會因出現異常發熱現象，以致電線著火。



警告



務必把電源插頭完全插入插座。否則，會導致觸電、短路、冒煙、著火。

電源插頭及其前端有灰塵附著時，應仔細擦拭。

否則，會導致火災。

在沒有成年人或監護人等對本機器的使用給予指揮管理或指示的情況下，本身對於運動能力、感覺能力或是智力低下及缺乏經驗和知識的人（包括兒童）嚴禁使用本機器。請確保兒童不使用及碰觸本機器。



請確實安裝上蓋。否則，翻倒時熱水流出，會導致燙傷。

發生異常及故障時，請立即停止使用。

如果照常使用會導致冒煙、著火、觸電、受傷的危險。

〈異常、故障例〉

●電源插頭、電源線異常發熱

●電源線損傷，觸碰導致通電斷續

●產品變形或異常發熱

●產品冒煙，有焦臭味

●產品的部份破損、鬆動或晃動

●蒸氣持續從出水口冒出5分鐘以上

●水從產品漏出

發生以上現象時，請立即拔下電源插頭，並洽詢購買店。



注意



拆卸上蓋時，請勿碰觸冒出的蒸氣。否則，會導致燙傷。

使用中或使用後，暫時避免觸摸高溫部位（出水口、出水口蓋等）。

否則，會導致燙傷。

搬運產品時，不可碰觸上蓋開閉鈕。

否則，上蓋脫落會導致燙傷、受傷。

請勿在距離牆壁或傢俱過近之處使用。

否則，蒸氣或散熱會導致牆壁或傢俱損壞、變色或變形。

請勿放在不穩定的地方使用。

否則，會導致燙傷、受傷。

請勿放在不耐熱的墊子或桌面上使用。

否則，會導致火災。

燒水時，請勿注水。

否則，熱水濺出，會導致燙傷。



請勿在熱源附近使用。否則，會導致火災、故障。

必須使用專用電源座。

該專用電源座請勿用於其他電器，或國外規格的電器產品。

否則，會導致故障或著火。



不使用時，請將電源插頭拔離插座。

否則，會導致燙傷、受傷，或因電源線材破損導致觸電、漏電、火災。

請待本體冷卻後再進行清理。

否則，碰觸到高溫部位會導致燙傷。

拔下電源插頭時，務必手持插頭，請勿拉扯電源線。

否則，會導致觸電、短路、著火。

若電源線損壞時，請勿繼續使用，並請洽詢購買店，由專業人員更換特別電源線（自費）以避免危險。

敬請注意

■請勿空燒。

否則，會導致火災、故障。

■請避免掉落、碰撞等撞擊。

否則，會導致故障、破損。

■繼續使用時，待上蓋及本體冷卻後再燒水。

否則，會導致燙傷。

■請勿在蒸氣會噴到其他電器的地方使用。

否則，蒸氣噴出會導致電器的火災、故障、變色及變形。

■長時間放置不使用時，請務必拔下電源插頭並將內容器的水完全倒淨。

否則，會導致故障。

■請勿用力重放或牽拉本體及電源座移動。

否則，會導致刮傷桌面等。

■放置於廚房用收藏架等處使用時，注意不要讓蒸氣碰到上層架板或天花板。

否則，會導致變色或變形。

■請注意避免讓水潑濺到電源開關。

否則，會導致故障。



■本產品適用於一般家庭以及下列類似用途。

●可用於商店、辦公室或其他工作環境中之員工用廚房。

●可用於住宅的起居室或與廚房類似的環境中。

※但請勿在不特定人數多的情況下長時間使用。

各部位名稱和使用方法

●本產品的本體與電源座為分離式設計。


注水時、拆卸或安裝上蓋時，會發出“喀搭喀搭”的聲音，並非異常。參閱P.14

出水口蓋

- 防止灰塵等由出水口進入。
- 請勿強力拉扯或彎折出水口蓋。(否則，會造成損毀。)

出水口

- 出水口有可能會有蒸氣冒出。

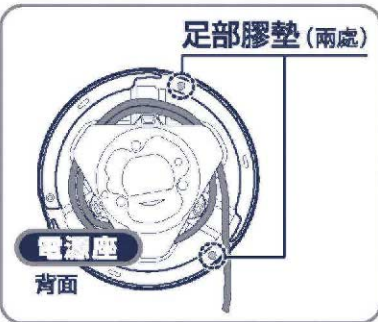


操作面板

按電源開關下側將會開啟電源，沸騰燈會亮燈。



電源“開”時

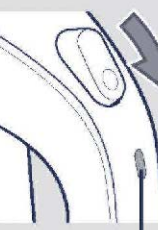


電源“關”時



本體底部




內容器內部

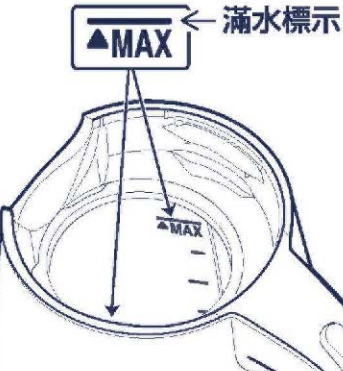

出水口的鎖定與解除


鎖定

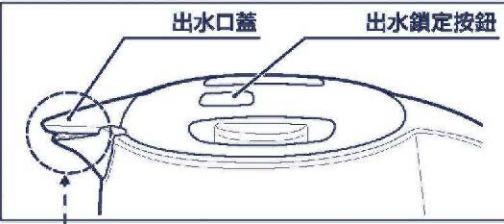

出水鎖定按鈕升起時，無法由出水口倒出熱水。除注水時，請保持鎖定。

- 即使為鎖定狀態，出水口蓋和出水口之間仍有縫隙，並非異常。

解除

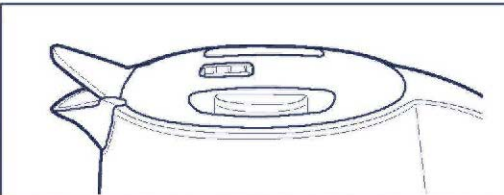


按一次出水鎖定按鈕則解除鎖定，可由出水口倒出熱水。

各部位名稱和使用方法 續

調節電源線的長短


請將電源線繞於電源座的底部（順時針方向）來調節長度，並通過電源座上的缺口處（有3個）將電源線拉出。

●不管是從三個缺口的任一處都可將電源線拉出。

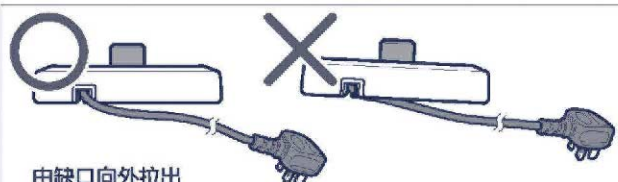

由缺口向外拉出

●請勿將電源座放置於電源線上。
（否則，會導致傾倒。若於上方放置重物或夾壓到電源線時，可能會導致電源線損壞，而導致火災、觸電）

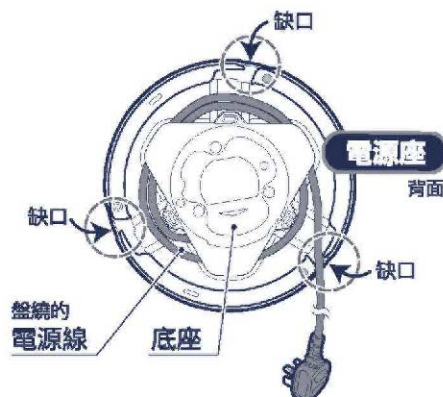

上蓋的拆卸和安裝方法

注意

拆卸或安裝上蓋時請注意蒸氣。
燒水時或沸騰結束後一段時間，請勿拆卸上蓋。（否則，會導致燙傷）


●請注意避免本體翻倒。

萬一本體翻倒時，立起本體後拆卸上蓋，將累積於上蓋內部的熱水由出水口側倒出。
（否則，熱水可能累積於上蓋內部，會導致燙傷。）

●拆卸或安裝上蓋時，請在本體移除電源座的狀態下進行。


拆卸方法

- 1 捏住上蓋開閉鈕的凹處
- 2 捏著往上拉提，拆卸上蓋

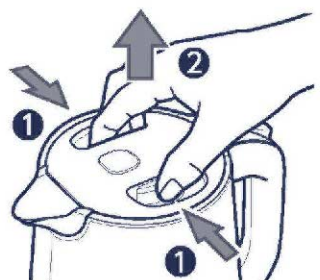

安裝方法


從一邊到另一邊，輪流確實按壓上蓋直至聽到“喀嚓”聲為止

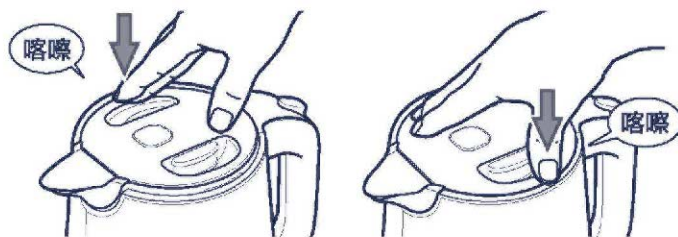

●請確認上蓋已完全安裝完成。

若上蓋有傾斜，或可看見上蓋開閉鈕的橘色部分，表示上蓋未完全安裝完成。請確實按壓上蓋直至看不見橘色部分為止。

（否則，會導致熱水漏出引起燙傷。沸騰結束後，電源可能無法切斷，從而導致故障。）

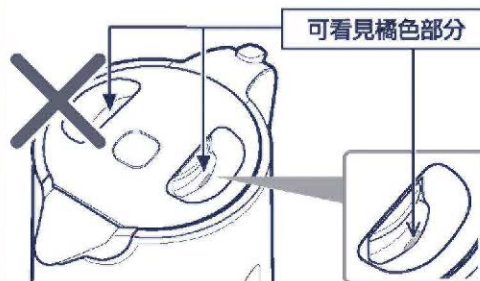


燒開水

初次使用或長時間未使用時，請將水煮沸倒掉後，再進行使用。

1 拆卸上蓋，使用別的容器加入水

請先加水，然後再將本體放置於電源座上。

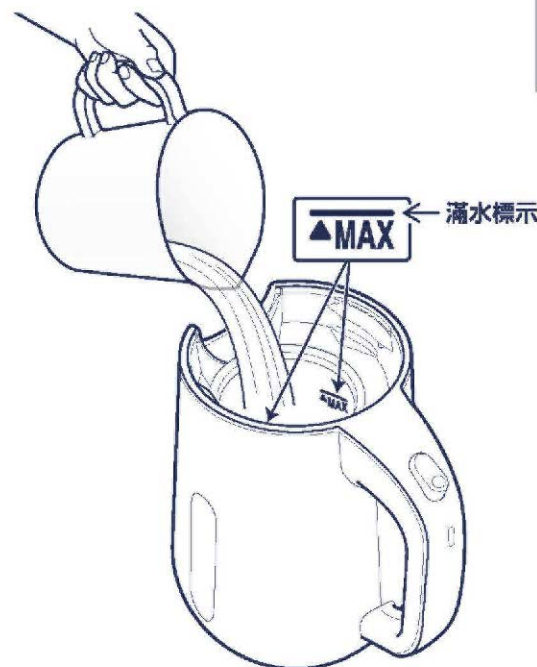

●有關過濾水或鹼性離子水的使用

有時水中會產生細小的浮游物，或內容器附著乳白色粗糙物，這是水質成分（礦物質），並非有害物質。使用過濾水或鹼性離子水時，請勤加清洗。


敬請注意

- 請不要從水龍頭直接加水，也不要放置於水槽內將底部弄濕。（本體內部進水會導致故障）
- 請注意避免讓水潑濺到電源開關、本體連接部及電源座連接部。（一旦內部進水會導致故障或生鏽）
- 加水時，請勿超過滿水標示。（否則，會導致熱水從出水口溢出而燙傷）
- 請不要放入水以外的物品。
- 請不要放入商店出售的水質改良物（碱等）及礦物質添加物。（否則，碎渣會引起堵塞導致故障）
- 請勿將本體置於電源座上加水。（若水潑濺到電源座，會導致故障）
- 請注意避免倒水位置附近有水滴殘留。（否則，水會由本體滴流）

2 安裝上蓋 將本體置於電源座上

① 安裝上蓋

從一邊到另一邊，輪流確實按壓上蓋直至聽到“喀嚓”聲為止

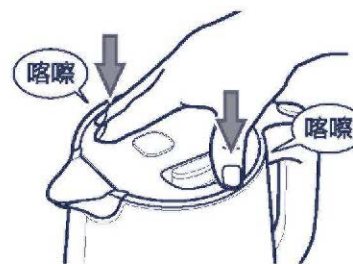


注意

請確認上蓋已完全安裝完成。若未完全安裝完成，會導致熱水洩漏，或燒水結束後無法切斷電源。（會導致熱水或蒸氣洩漏或故障）

② 確認電源開關為“關”的狀態，將本體置於電源座上

請將本體連接部與電源座連接部確實對好。（如未對正放置，就不會開始燒水。）

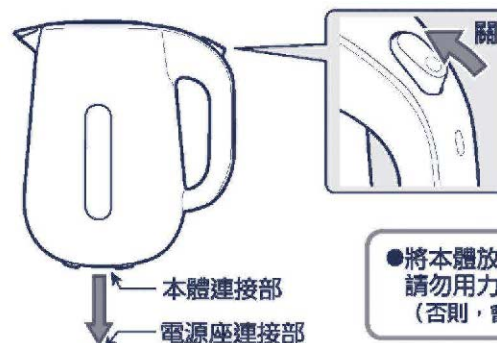

●將本體放在電源座上時，請勿用力重放。（否則，會導致刮傷桌面等）


請勿使用專用電源座以外的物品。

電源線須先拉出，電源座請放置於乾淨、平穩之處。

燒開水 續

3 將插頭完全插入電源插座 按下電源開關

①將插頭完全插入電源插座

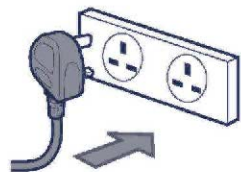


- 需單獨使用額定10安培以上的電源插座。
(若與其他器具共同使用，多孔插座會因出現異常發熱現象，導致著火。)

②確認出水鎖定按鈕為鎖定狀態，按下電源開關

沸騰燈亮燈，開始燒水。

- 出水口會有蒸氣冒出，請注意。

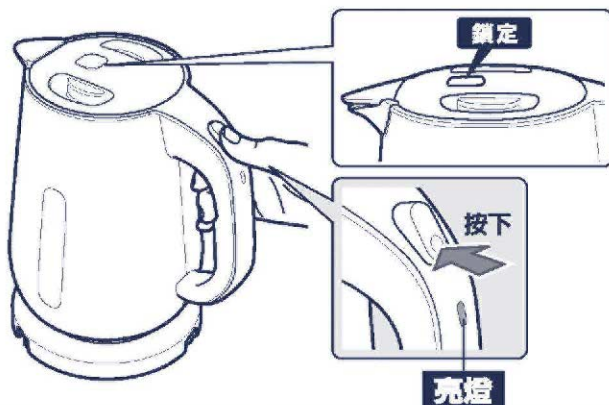


避免導致燙傷，請遵守以下事項。

- 不要將抹布覆蓋在上蓋或出水口上。
- 不要將手、臉靠近出水口。
- 燒水時，請勿拆卸上蓋。
- 燒水時，不要注水。
- 燒水時，請勿移動。

水沸騰後

③電源會自動切斷

沸騰燈滅燈。

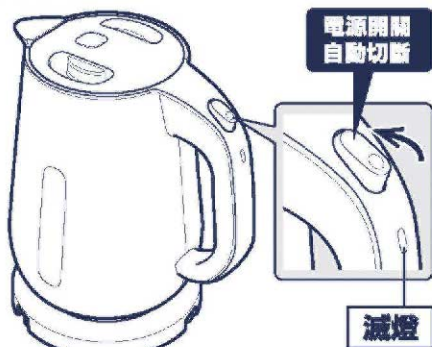

- 燒水完成之前若要切斷電源，請按下電源開關的上側切斷電源。
- 不具備保溫功能。

沸騰所需時間

約7分鐘

(室溫23℃、水溫23℃、總額定消費電功率、滿水的情況)

注水

請待沸騰停止過後，再倒出熱水。


請確認沸騰燈滅燈後

①握著手柄將本體自電源座上移除，按下出水鎖定按鈕解除鎖定後，慢慢傾斜倒出熱水

- 本產品為感應蒸氣以自動切斷電源的設計。此蒸氣可能冷凝成水滴而由本體底部滴流，但並非故障。此外，這也不會造成故障，故請安心使用。

注水時

按下出水鎖定按鈕，解除鎖定

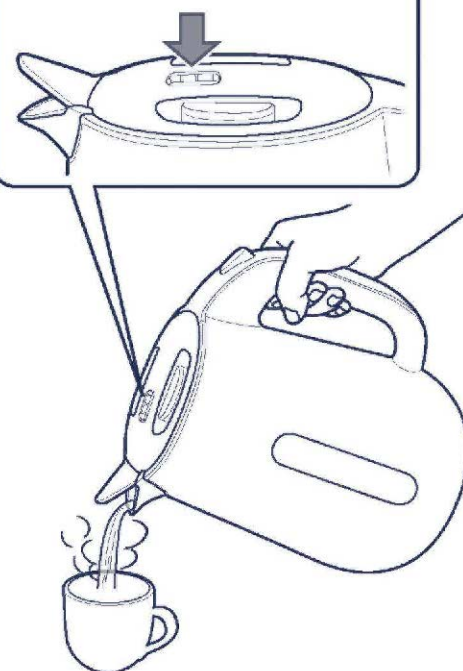

注意


為避免造成燙傷，注水時請遵守以下內容。

- 請勿用手觸碰本體連接部。
- 請小心由出水口流出的熱水以及冒出的蒸氣。
- 請勿快速傾斜。
- 注水時請勿按出水鎖定按鈕。
(否則，熱水會噴濺導致危險)
- 注水時請勿碰觸上蓋開閉鈕。

敬請注意

- 沸騰結束後一段時間，請勿拆卸上蓋或重裝。
(否則，會導致注水時熱水飛濺)

②注水結束後將本體返回水平狀態，再次按下出水鎖定按鈕鎖定

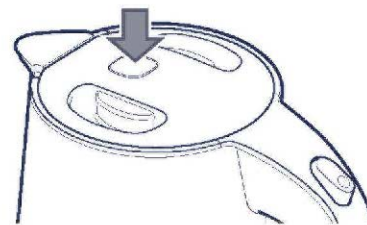

敬請注意

- 即使為鎖定狀態，也絕對不要翻倒、傾斜、搖晃產品。萬一翻倒產品，立起產品時請勿將手等靠近出水口。(出水口會有熱水或蒸氣冒出，導致燙傷)
 - 不使用時，應從電源插座上拔下電源插頭。請特別注意幼兒的安全。(否則，會導致受傷或觸電)
 - 要置於電源座上時，請先確認電源開關為“關”之後才放上。
- 使用後過一段時間，會發出“喀喀”的聲音，這是被加熱的沸騰感應裝置冷卻時所發出的聲音，產品並無問題。請安心使用。

倒掉剩餘熱水時

使用後，請勿殘留熱水，將內容器中的水倒空。

①拆卸上蓋（參閱P.6）

注意

累積於上蓋內部的熱水，可能由出水口或蒸氣通路墊圈流出。（注意避免燙傷）

②握著手柄，慢慢傾斜本體將剩餘熱水由倒水位置倒掉

注意

由別的位置倒掉剩餘熱水會使熱水進入本體內部，而導致故障。

敬請注意

- 不要用沾濕的手，插拔電源插頭或電源座連接部。（否則，會導致短路或觸電）
- 拆卸上蓋時，請注意避免出水口和上蓋內部的水滴到手。（否則，會導致燙傷）
- 注意不要讓熱水潑濺到電源開關、本體連接部及電源座連接部。（否則，會導致燙傷或故障）
- 使用後，請倒掉剩餘熱水。（否則，會導致水垢附著、有異味）

敬請注意

- 倒水位置周圍殘留的水滴，請擦拭乾淨。（否則，會導致水由本體滴流）



關於防止空燒

若於內容器空的狀態下按下電源開關，為了防止因過熱發生事故，防止空燒功能會啟動，使電源自動切斷。（沸騰燈滅燈。）

處理

請將電源開關置於“關”，把本體自電源座上移除，待內容器充分冷卻後加入水，再次燒水。



清理

清洗產品前請務必從插座上拔下插頭，倒淨剩餘熱水並待產品冷卻。

敬請注意

- 請不要在底部潮濕的狀態下將熱水瓶倒置進行晾乾。（一旦內部進水會導致故障或生鏽）
- 請勿使用以下物品。
 - 稀釋劑、漂白劑等（否則，會導致變色、破裂、退化、腐蝕）
 - 去污粉、尼龍刷、金屬製的東西、科技海綿、尼龍海綿、刷子、含有研磨劑的洗潔劑等（否則，會導致表面受損）
 - 洗潔劑（否則，熱水溢出，會導致燙傷、有異味）
- 使用化學抹布時，請勿大力搓刷或長時間放置。（否則，會導致表面受損或引起化學反應）
- 請勿使用烘碗機或洗碗機。（否則，會導致樹脂變形）
- 長時間不使用時，為避免留有異味，請將本體及上蓋充分晾乾後放入塑膠袋內保管。
- 絕對不要整體沖洗上蓋、本體、電源座。

上蓋、本體、電源座

用擰乾水分的濕抹布擦拭。

- 絕對不要整體沖洗。此外，請勿讓水潑濺到電源開關、本體連接部、電源座連接部。（否則，一旦內部進水會導致故障或生鏽）

沸騰感應裝置蓋

用棉棒擦拭。

（先用濕棉棒擦拭沸騰感應裝置蓋之後，再以乾棉棒擦拭一次則效果更佳。）

- 請勿按壓沸騰感應裝置蓋，或使異物附著。（若沸騰感應裝置變形，會導致蒸氣外洩，或沸騰感應裝置無法正常運作。）

止水閥

用棉棒擦拭。

- 請勿拉扯止水閥或對止水閥施加壓力。（若止水閥變形，會導致蒸氣外洩、漏水。）

內容器

定期進行檸檬酸清洗。參閱P.12

出現以下情況時，請進行檸檬酸清洗。

- 紅色銹斑（氧化鐵）
- 乳白色、黑色等的變色，及薄膜狀浮游物
- 燒水時聲音過大
- 熱水有異味

（內容器的污垢程度會根據當地的水質和燒水次數而不同。）

內蓋

用濕海綿擦拭。



本體連接部・電源座連接部・
電源線・電源插頭

用乾軟布擦拭。

建議每 1 ~ 3 個月清洗 1 次

檸檬酸清洗方法

為了防止起泡和溢出，請使用本公司的熱水瓶內容器清洗用檸檬酸（CD-K03E-JU、另售）。參閱P.13

不要飲用檸檬酸洗淨中熱水。

- 1 將檸檬酸30g放入杯中，用溫水溶化開，然後在內容器中加水並倒入檸檬酸液體（水量不要超過滿水標示 **▲MAX**）
- 2 安裝上蓋並插上電源插頭後，按下電源開關燒水，此狀態下靜置約2小時
- 3 拆卸上蓋的狀態倒掉熱水
- 4 只加入水後安裝上蓋，將水燒開，按出水鎖定按鈕解除鎖定，由出水口倒掉熱水（為沖洗內容器及出水口內部）

敬請注意

- 加水時，請勿超過滿水標示。（否則，會導致熱水溢出而燙傷）
- 污垢難以去除時，請反覆使用檸檬酸洗淨。

倒掉熱水時

- 請注意熱水和蒸氣。（否則，會導致燙傷）

- 使用過濾水或鹼性離子水時，內容器容易附著水質成分（礦物質）。另外，當內容器附著水質成分（礦物質）等污垢而放置不理時，會使燒水中聲音增大。使用過濾水或鹼性離子水時，請勤加清洗。

更換內蓋墊圈

內蓋墊圈是消耗品，建議一年更換一次。

新內蓋墊圈，請先用濕的軟海綿擦拭後再安裝。

內蓋墊圈有變硬、萎縮或顏色變白等老化情形時...

請更換新的內蓋墊圈（收費）

當內蓋墊圈有變硬、萎縮或顏色變白等老化情形時，如果傾斜或不慎翻倒，熱水有可能從上蓋與本體之間流出，有燙傷的危險。蒸氣洩漏可能造成燙傷、故障。
若更換內蓋墊圈後還是蒸氣洩漏或熱水溢出時，可能還有其他零件損壞，請洽詢購買店。

內蓋墊圈的拆卸方法

拿緊上蓋，拆下內蓋墊圈




敬請注意

- 請勿分解上蓋。
- 請勿由上蓋取下內蓋墊圈以外的任何零件。（否則，會導致熱水溢出而燙傷）
- 請勿用力拉扯內蓋墊圈。（否則，會導致破損）




內蓋墊圈的安裝方法

①將內蓋墊圈套入上蓋外周

②如圖所示，再將內蓋墊圈全部嵌入

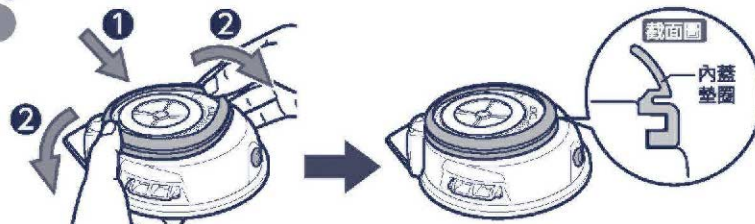

請確認內蓋墊圈是否已完全套進。

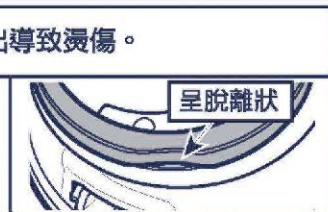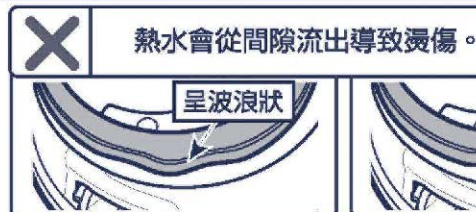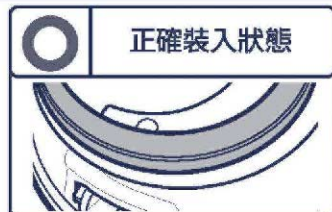

關於零件更換、購買

- 右表為更換零件的名稱。損壞時，請更換新的零件（收費）。
- 更換時，請確認好產品的型號及零件名稱後，請到購買店購買。

零件名稱	零件號碼
內蓋墊圈	BF439020M-00
熱水瓶內容器清洗用檸檬酸（30g×4包裝）	CD-K03E-JU

商品 Q&A

可以放入水以外的物品嗎？	請不要放入水以外的物品，因為會導致故障，或因加入物品的溢出而導致燙傷。	▶ P.2
不每天換水可以嗎？	使用後，請倒掉剩餘熱水。如不倒掉剩餘熱水可能導致內容器附著水垢、煮沸時聲音會變大、水中異味。	▶ P.10
使用過濾水或鹼性離子水可以嗎？	可以使用。但有時水中會產生細小的浮游物、或內容器附著乳白色粗糙物。這是水質成分（礦物質），並非有害物質。請勤加清洗。	▶ P.7 ▶ P.12
不慎喝入了檸檬酸清洗時的熱水!!	請依照檸檬酸清洗劑外包裝中所記載的內容進行。	

認為故障時

委託修理前，請檢查以下項目。

現象	原因	處理方法
未通電 沸騰燈不亮	電源插頭脫落？	插好電源插頭。
	本體是否正確地放置在電源座上？	請正確放置。
	是否有按下電源開關？	請按下電源開關。
	電源座連接部是否沾附金屬片或垃圾？	請取下沾附於其上的金屬片或垃圾。
	內容器是否充分冷卻？ 有可能防止空燒功能啟動中。	請將電源開關置於“關”，將本體從電源座上卸下來待內容器充分冷卻之後加入水，再次燒水。
電源開關無法操作	是否燒水剛結束後就按下電源開關？	請等充分冷卻後再使用。
按下電源開關後，不久電源自動切斷，沸騰燈滅燈	是否忘記加水？ 防止空燒功能啟動。	將電源開關置於“關”，待內容器充分冷卻之後加入水，再次燒水。 參閱P.10
將本體置於電源座上則馬上開始燒水	是否於電源開關“開”的狀態置於電源座上？	請先確認電源開關為“關”之後，才置於電源座上。
無法完成沸騰	上蓋是否未蓋好？	請確實安裝上蓋。
	出水鎖定按鈕是否為解除鎖定的狀態？	請鎖定出水鎖定按鈕。

認為故障時 續

現 象	原 因	處 理 方 法
熱水從出水口自動流出	加水超過滿水標示以上。	水量保持在滿水標示以下。
熱水中有薄膜狀的白色浮游物	這是水質成分（礦物質）所致，並非內容器的腐蝕。	<div>水 垢</div> <p>在使用過程中，水質成分（礦物質）會附著在內容器上，這就是通常所說的“水垢”，並非有害物質。</p>
內容器附著乳白色粗糙物	這是水質成分（礦物質）所致，內容器附著水垢等污垢而放置不理時，煮沸時聲音會變大。	
燒水時，聲音越來越大	這是水質成分（礦物質）所致，內容器附著水垢等污垢而放置不理時，煮沸時聲音會變大。	
內容器有紅色鏽狀或灰色斑點	這是水中鐵質成分所致，並非內容器的腐蝕。	
本體外側異常變熱	●是否連續按電源開關，強制持續燒水？ 強制持續燒水會使本體外側變熱，或在本體內部凝結成水滴而滴流。 請勿連續按電源開關。	
本體底部有水滴流	●本產品為感應蒸氣以自動切斷電源的設計。此蒸氣可能在電源開關冷凝，或由本體底部滴流，但並非故障。此外，這也不會造成故障，故請安心使用。	
本體外側變熱	●水溫或室溫較高時，本體的外表會達到約60℃。並非異常。	
電源線發熱	●煮沸過程中，有時電源線可能會發熱，並非異常。	
注水時、拆卸或安裝上蓋時，會發出“喀搭喀搭”的聲音	●這是萬一本體傾倒時，為防止熱水流出所設置的鋼珠球滾動的聲音，並非異常。	
沸騰後過一段時間，會發出“喀嚟”的聲音	●這是被加熱的沸騰感應裝置冷卻時所發出的聲音，並非異常。	
上蓋的消耗	內蓋墊圈	●內蓋墊圈是消耗品，建議一年更換一次。如果從上蓋與本體的間隙處冒出蒸氣、內容器上緣有殘留水珠、或內蓋墊圈有變硬、萎縮、顏色變白等老化情形時，請更換新的墊圈。 參閱P.12
	樹脂零件	●上蓋的樹脂零件，會隨使用而產生損傷。因使用符合食品衛生安全的材質，當樹脂部份變色或變的粗糙時，請更換新的上蓋（收費）。
內容器會因使用而損傷。 請洽詢購買店。		


規格

型 號	CK-VAQ15
額 定 容 量	1.5L
額定電壓及額定頻率	交流220-230V 50/60Hz
總額定消耗電功率	1190-1300W
電 源 線 長 度	0.7m
外 形 尺 寸 (約cm)	寬22.5×深16.5×高24 (不含電源座)
	寬22.5×深16.5×高26
重 量	約1.0kg (不含電源座)
	約1.3kg

- 在特定區域（高山，嚴寒地等）時，功能可能無法正常運作，請避免在這些區域使用。
- 本產品不能在電源電壓或電源頻率相異的地區使用。

如何更換保險絲

1. 打開電源插頭的保險絲蓋。
2. 拆下內部保險絲。
3. 在保險絲蓋上安裝新保險絲，保險絲蓋裝回到電源插頭上。
(請務必更換與安裝的保險絲具有相同電流值的保險絲。)

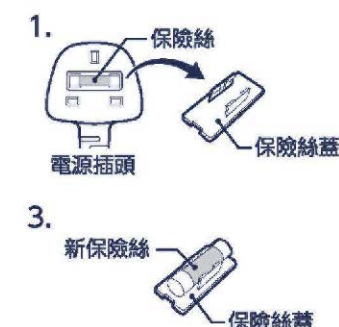

[illegible]

ELECTRIC KETTLE

OPERATING INSTRUCTIONS

CK-VAQ15

- Always follow basic safety precautions when using electrical appliances.
- Read all instructions carefully. Please keep these Operating Instructions at hand for easy reference.

INDEX

BEFORE USE

IMPORTANT SAFEGUARDS	2
PARTS NAMES AND FUNCTIONS	4

HOW TO USE

BOIL MODE	7
POUR HOT WATER	9
DISPOSE OF WATER	10
AUTOMATIC SHUT-OFF FUNCTION	10

CLEANING AND MAINTENANCE

CLEANING AND MAINTENANCE	11
HOW TO PERFORM CITRIC ACID CLEANING	12
HOW TO REPLACE THE INNER LID GASKET	12
REPLACEMENT PARTS	13

BEFORE CALLING FOR SERVICE

Q&A ON PRODUCT USE	13
TROUBLESHOOTING GUIDE	13
SPECIFICATIONS	15

● This product is for boiling water only and does not have a Keep Warm function.

IMPORTANT SAFEGUARDS

Be sure to follow these instructions.

These WARNINGS and CAUTIONS are intended to prevent property damage or personal injury to you and others.

The degree of danger or damage by the misuse of this product is indicated as follows:



WARNINGS Indicates risk of serious injury or death.



CAUTIONS Indicates risk of injury, household or property damage if mishandled.

Prohibited or required actions are indicated as follows:



Indicates a prohibited operation.



Indicates a requirement or instruction that must be followed.

WARNINGS



Do not modify the product. Only a repair technician may disassemble or repair this unit. Attempting to do so may cause fire, electric shock or injury. Make any repair inquiries to the retail store where you purchased this product.

Do not immerse the product in water or splash it with water, and do not put it on a wet surface such as a sink. Doing so may cause short circuit or electric shock.

Do not allow liquid to come into contact with the Receptacle or Power Base. Doing so may cause short circuit or electric shock.

Do not plug or unplug the Power Plug if your hands are wet. Doing so may cause electric shock or injury.

Do not touch the Spout or bring your hands and face near the Spout. Doing so may cause burns or scalding. Take special precautions with children and infants.

Do not cover the Spout with anything such as a dishcloth. Hot water may spill out, resulting in scalds. It may also cause deformation or discoloration of the Upper Lid or breakdown of the product.

Do not slam the Upper Lid when closing. Hot water may dispense or spill out, resulting in scalds.

Do not fill over the Maximum Water Level Line.

Overfilling may cause hot water to spill out, resulting in scalds.



Do not tilt or shake the product or carry it in your arms. Do not move it or drain hot water by holding the Upper Lid. Hot water may spill from the Spout, resulting in scalds.

Do not tilt or tip over the product. Hot water may spill from the Spout, resulting in scalds.


Do not use a power source other than 220-230 V AC. Use of any other power supply voltage may cause fire or electric shock.

Do not allow children to use the product unsupervised. Keep it out of the reach of infants. Doing so may cause burns, injuries, or electric shock.



Do not use the product if the Power Plug or Power Cord is damaged or if the Power Plug is loosely inserted into the electrical outlet.

Doing so may cause electric shock, short circuit or fire.

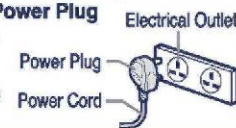

Do not damage the Power Cord. Do not bend, pull, twist, fold, or attempt to modify the Power Cord. Do not place it on or near high temperature surfaces or appliances, under heavy items or between objects. A damaged Power Cord can cause fire or electric shock.

Do not use the product as a cooler or place ice inside of it.

Doing so may cause condensation, resulting in electric shock or breakdown of the product.

Do not place the product over direct flame (such as a gas stove top), or on top of electric or induction heating (IH) cookers.

Doing so may cause fire, breakdown of the product.

Do not fill with or boil anything other than water.

Attempting to boil, cook, or heat up the following items may cause bubbling or boiling over, which may cause scalding. Doing so may also cause clogging of the water route, or scorching and corrosion of the Inner Container.

- Milk, sake, soup, charcoal, tea bags or tea leaves
- Instant food
- Food and sauce pouches or foods in plastic bags

Do not allow the Receptacle and Connector (metal parts) to become soiled with dust or come into contact with any metal objects.

Doing so may cause electric shock, short circuit or fire.

Do not allow infants or children to lick the Receptacle and Connector (metal parts).

Doing so may cause electric shock or injury. Take special precautions with children and infants.



Replace the Inner Lid Gasket if it hardens, changes shape, turns white, or otherwise becomes worn out.

Hot water may spill out when the product is tilted or tipped over accidentally, and may cause scalding. Steam may also leak out from the gap and cause scalding or product failures.

Use only an electrical outlet rated at 10 amperes minimum, and do not plug other devices into the same outlet.

Plugging other devices into the same outlet may cause the electrical outlet to overheat, resulting in fire.



WARNINGS



Insert the Power Plug completely and securely into the electrical outlet.

A loosely inserted Power Plug may cause electric shock, short circuit, smoke or fire.

If the blades (plug tip) or base of the Power Plug become soiled, wipe them clean.

A dirty Power Plug may cause fire.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.

Make sure to attach the Upper Lid.

Hot water may spill out when the product is overturned, resulting in scalds.



Stop using immediately if you notice any of the following symptoms indicating a malfunction or breakdown.

Continued use of the product may cause smoke, fire, electric shock or injury.

<Examples of Abnormalities and Malfunctions>

- Power Plug or Power Cord has become very hot.
- The Power Cord is damaged or the electricity turns on and off when touched.
- The product is deformed or unusually hot.
- Smoke is arising from the product or there is a burning smell.
- Some part of the product is cracked, loose or unstable.
- Steam continues to come out of the Spout for at least 5 minutes.
- Water leaks from the product.

If any of the above occurs, unplug the Power Plug immediately and return to the retail store where you purchased this product for check-ups and/or repairs.



CAUTIONS



Always use caution when detaching the Upper Lid and avoid skin contact with steam.

Steam may escape upon detaching the Upper Lid and cause scalds.

Avoid skin contact with hot surfaces (Spout, Spout Cover, etc.) while in use or shortly after use.

Touching hot surfaces may cause burns.

Do not hold or carry the product by the Lid Lock. The Upper Lid may detach, resulting in injuries or scalds.

Do not use the product near walls or furniture. Steam or heat may damage, discolor or deform walls or furniture.

Do not place or use the product on unstable surfaces. Doing so may cause scalds or injuries.

Do not use on surfaces that are sensitive to heat. Doing so may cause fire.

Do not attempt to dispense hot water while it is boiling.

Hot water can spurt out, resulting in scalds.



Do not use the product near a heat source. This may cause fire, breakdown of the product.

Do not use other Power Base than the one provided. Do not use the Power Base for other appliances. Do not use the Power Base for overseas models. Doing so may cause malfunction or fire.



Unplug the Power Plug from the outlet when the product is not in use.

Leaving the Power Plug in an outlet may result in burns, injuries or electric shock from damaged insulation, or fire from a short circuit.

Please allow the product to cool down before cleaning. Touching hot surfaces may cause burns.

Always unplug the product by holding the Power Plug, not by pulling the Power Cord. Pulling the Power Cord to unplug the product may cause electric shock, short circuit or fire.

If the Power Cord is damaged, it must be replaced by an appropriate cord or assembly made available by the manufacturer or its service agent.

IMPORTANT

Do not operate the product when it is empty. Doing so may cause fire or breakdown.

Avoid rough handling, dropping or bumping the product. Doing so may cause damage or cease operation of the product.

When using continuously, allow the Upper Lid and the Body to cool down before boiling water. Not doing so may cause burns.


Do not use the product where its steam may come into contact with other electrical appliances. The steam may cause fire, malfunction, discoloration or deformation to other electrical appliances.

Allow the Inner Container to dry completely when storing the product for a long period of time where it may freeze. If water left inside freeze, it may cause breakdown or malfunction.

Do not place the Body or the Power Base too hard, or drag them over any surface while attempting to move. Doing so may cause damage to surfaces such as countertops.

Avoid letting steam make contact with cabinets and walls when using near or under a kitchen shelf. Doing so may cause discoloration or deformation.

Do not splash water on the Power Switch. Doing so may cause breakdown of the product.

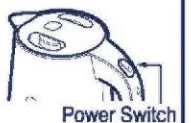

This product is intended to be used in household and similar applications such as;

- Staff kitchen areas in shops, offices and other working environments;
- Environments comparable to residential living rooms and kitchens;

* This product is not intended for use by many unspecified people for a long period of time.

PARTS NAMES AND FUNCTIONS

●This product consists of a separate Body and Power Base.




Spout Cover

- Prevents dust from entering the Spout.
- Do not pull or bend the Spout Cover strongly. (Doing so may cause damage of the product.)

Spout


- Please be aware that steam comes out of the Spout.

The light sound you may hear when detaching and attaching the Upper Lid is normal. (see pg.14)

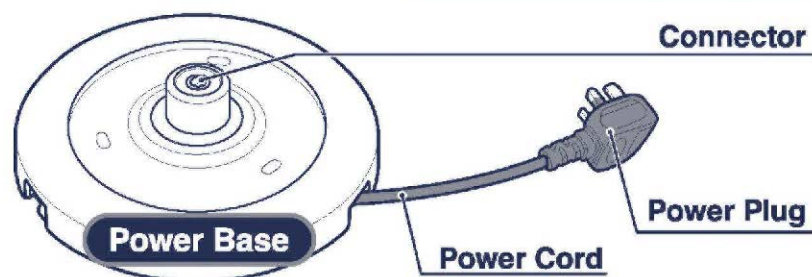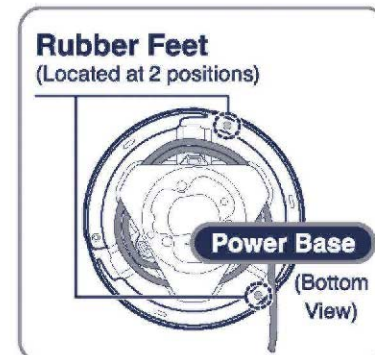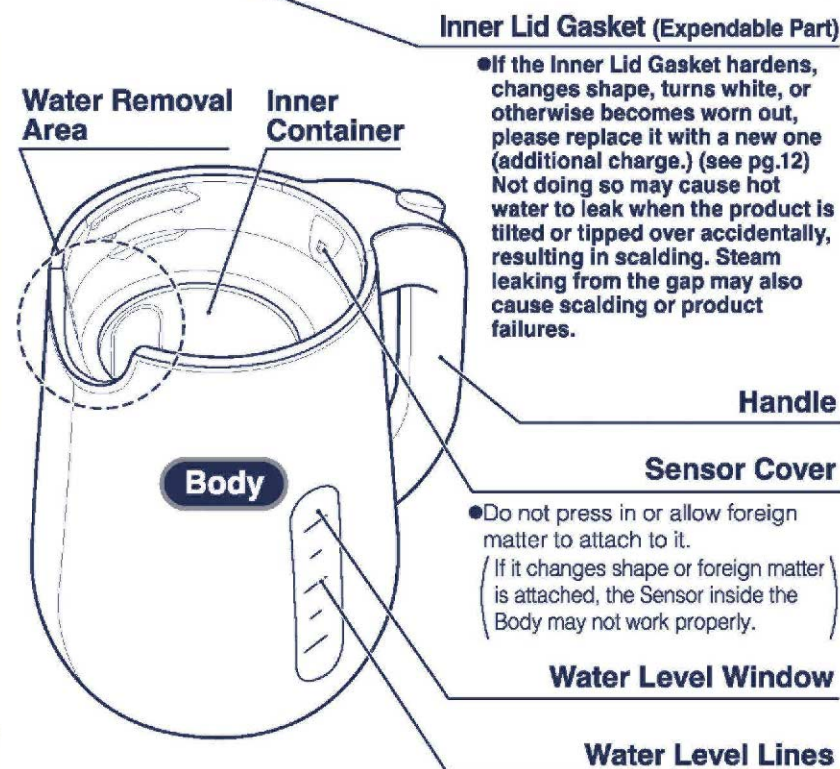


Control Panel

The product is switched ON and the Boil Light turns on when the bottom part of the Power Switch is pressed.

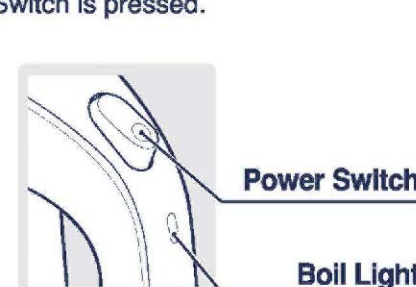


When switched ON

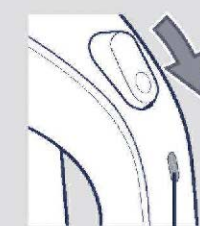

Turns on

When switched OFF

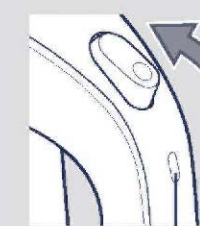


Turns off

Body Bottom




Inner Container Inside

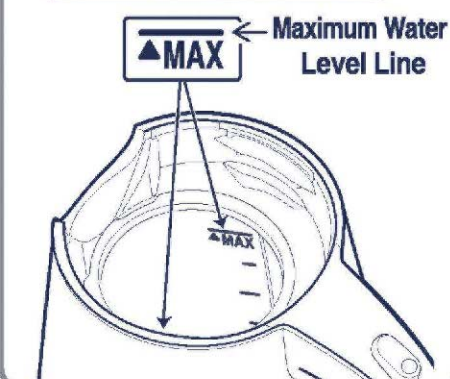

Locking/Unlocking the Spout


Lock

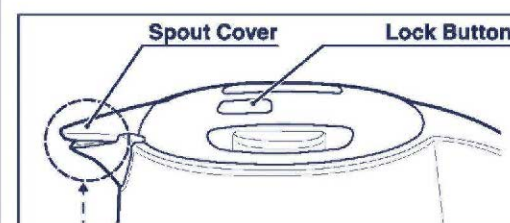

When the Lock Button is raised, hot water will not come out of the Spout. Please keep it locked except when pouring.

- There is a gap between the Spout Cover and the Spout even when it is locked, but this is normal.

Unlock

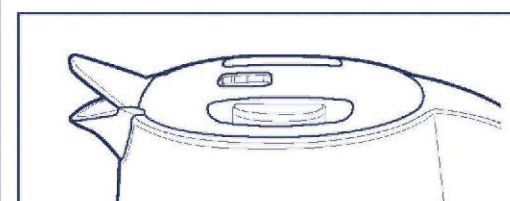


The product will be unlocked and you will be able to pour hot water from the Spout when the Lock Button is pressed once.

PARTS NAMES AND FUNCTIONS (cont.)

How to Shorten/Lengthen the Power Cord


Adjust the length of the Power Cord by wrapping it clockwise around the bottom of the Power Base, and allow it to come out of the Power Base from one of the three Openings at the bottom.

- The Power Cord can come out from any of the three Openings.

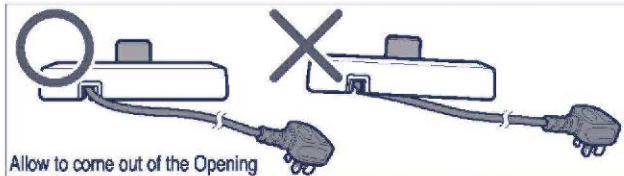

Allow to come out of the Opening

- Do not allow the Power Base to crush the Power Cord.
(Doing so may cause the product to tilt or tip over. Placing heavy items on the Power Cord or pinching it may damage the Power Cord and cause fire or electric shock.)

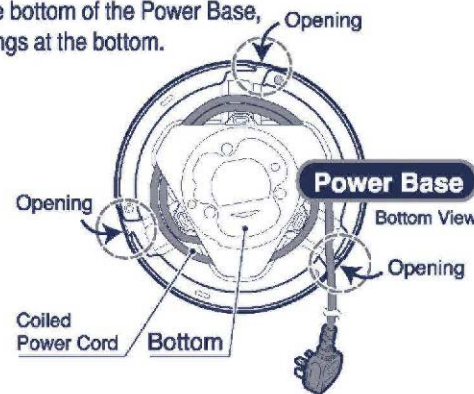

How to Detach/Attach the Upper Lid


CAUTION

Take precaution with the steam when detaching and attaching the Upper Lid. Do not detach the Upper Lid while the water is boiling or a while after the water is finished boiling. (May result in scalding.)

- Be careful not to let the Body overturn.
If the Body overturns, detach the Upper Lid after standing the Body up, and pour out the hot water that has accumulated on the inside of the Upper Lid from the Spout side of the Upper Lid. (Hot water may accumulate on the inside of the Upper Lid, resulting in scalding.)
- When detaching and attaching the Upper Lid, first remove the Body from the Power Base.


To Detach

- 1 Press in the Lid Lock as illustrated.
- 2 Pull up and detach the Upper Lid.

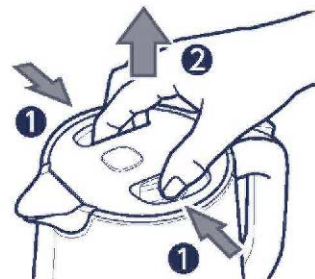

To Attach


Push the Upper Lid down securely one side at a time until it clicks.

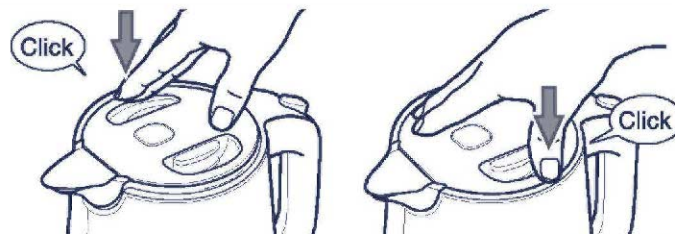

- Make sure that the Upper Lid is completely attached.

The Upper Lid is not completely attached if the Upper Lid is tilted or you can see the orange part of the Lid Lock. Make sure to push the Upper Lid in until the orange part is no longer seen.

(Continued use of the product may cause hot water to spill out, resulting in scalding. The product may not switch OFF even when boiling has completed, resulting in breakdown.)

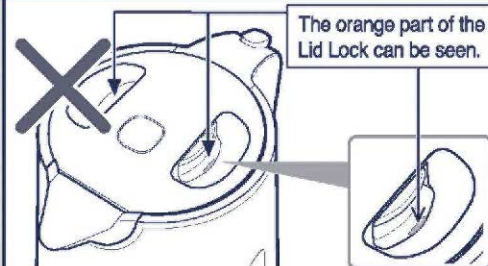

The orange part of the Lid Lock can be seen.


BOIL MODE

The first time you use the product or after storing it for a long period of time, boil water once and discard it from the Spout before boiling water for consumption.

The first time you use the product you may notice the smell of plastic. This is normal and will gradually fade away.

1 Detach the Upper Lid and fill with water using another container.

Fill the Inner Container with water before placing the Body onto the Power Base.

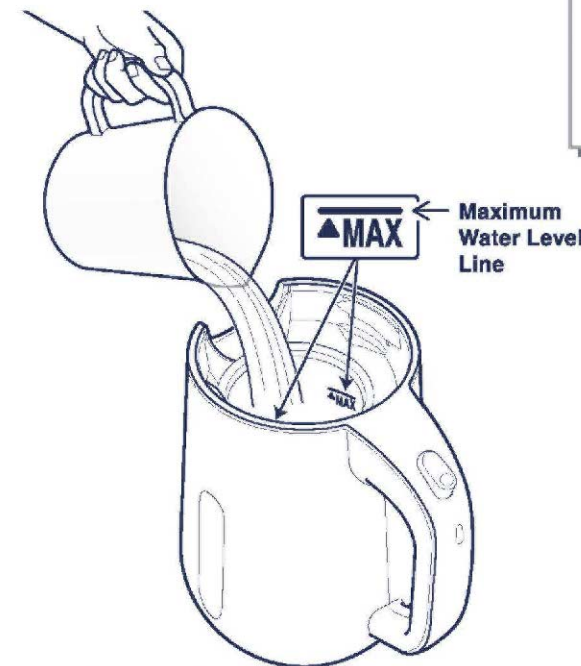

When using mineral or alkaline ionized water:

When mineral or alkaline ionized water is used, a floating residue may develop on the surface of the water, and a milky white substance may form on the surface of the Inner Container. This is due to the ingredients in the water (minerals) and is harmless to your health. Frequent cleaning is recommended.


NOTE

- Do not fill the Inner Container directly from a water faucet or place the product on a wet surface such as a sink. (Water may get inside the Body and cause breakdown.)
- Do not splash water on the Power Switch, Receptacle, or Connector. (Water may get inside and cause breakdown and rust.)
- Do not fill over the Maximum Water Level Line. (Hot water may overflow from the Spout and cause scalds.)
- Do not fill the Inner Container with any liquid other than water.
- Do not use water additives such as charcoal for water purification or mineral additives. (Small particles may get clogged inside of the product and cause breakdown.)
- Do not fill the Inner Container while the Body is connected to the Power Base. (Doing so may splash water on the Power Base and cause malfunction.)
- Be careful not to leave any water droplets around the Water Removal Area of the Body. (This may cause water to drip from the Body.)

2 Attach the Upper Lid and place the Body on the Power Base.

1 Attach the Upper Lid.

Push the Upper Lid down securely one side at a time until it clicks.

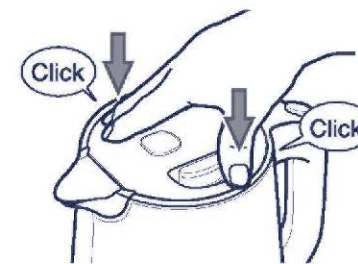


CAUTION

Make sure that the Upper Lid is completely attached. If it is not completely attached, hot water may leak or the product may not switch OFF even when boiling has completed. (This may cause hot water and steam to leak, and breakdown.)

2 Make sure the Power Switch is switched OFF and place the Body on the Power Base.

Set the Body on the Power Base correctly so that the Connector fits in the Receptacle securely. (The power will not turn on if not properly set.)

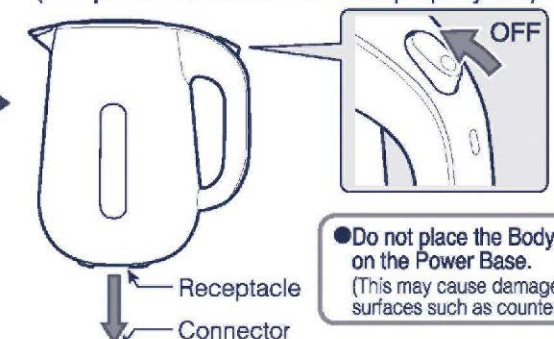

- Do not place the Body too hard on the Power Base. (This may cause damage to surfaces such as countertops.)


Only use the coordinated Power Base designed for this product.

Place the Power Base on a clean, level and stable surface.

BOIL MODE (Cont.)

3 Insert the Power Plug Into the electrical outlet and press the Power Switch.

① Insert the Power Plug into the electrical outlet.

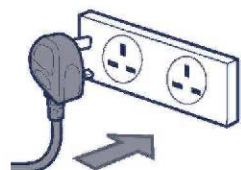


- Use only an electrical outlet rated at 10 amperes minimum, and do not plug other devices into the same outlet.
(Plugging other devices into the same outlet extender may cause the electrical outlet to overheat, resulting in fire.)

② Make sure that the Lock Button is locked, and press the Power Switch.

The Boil Light turns on and starts boiling.


- Please be aware that steam comes out of the Spout.

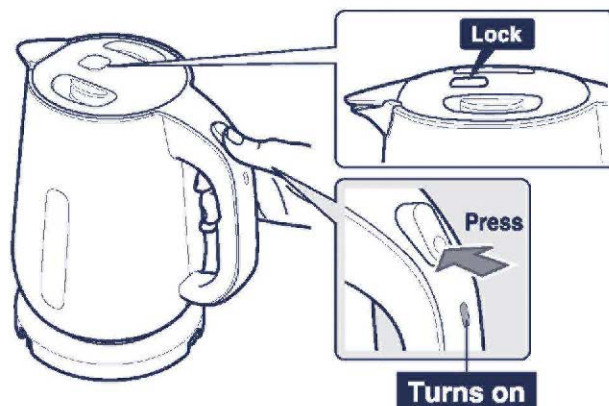

Please follow the instructions below to reduce the risk of scalding:

- Do not cover the Upper Lid or Spout with a cloth.
- Do not bring your hands and face near the Spout.
- Do not detach the Upper Lid during the boiling process.
- Do not attempt to pour hot water during the boiling process.
- Do not move the product during the boiling process.

③ When boiling has completed, the product automatically switches OFF.
The Boil Light turns off.

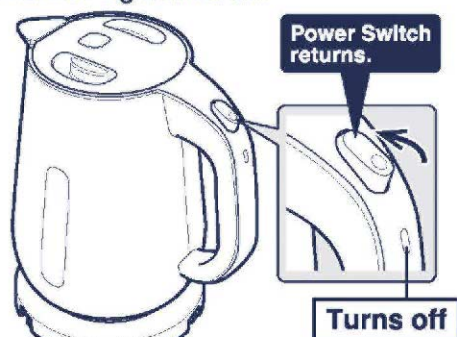


- To switch OFF the power before boiling has completed, press the upper side of the Power Switch to switch OFF the power.
- This product does not have a Keep Warm function.

Time required to boil water

Approx. 7 minutes

(Room temperature 23°C / water temperature 23°C / rated power consumption / when filled with water)

Please be aware that the Spout and Receptacle are hot immediately after the water is finished boiling.
Take special precautions with children and infants.

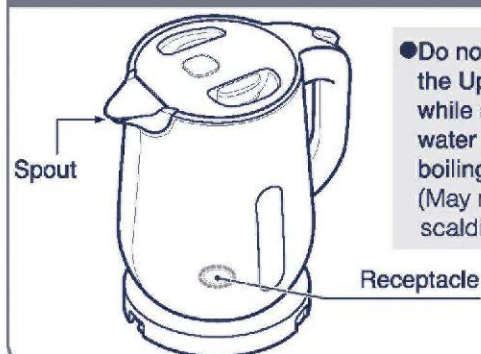

- Do not detach the Upper Lid a while after the water is finished boiling. (May result in scalding.)

CAUTION

Do not continue to press the Power Switch to force the water to continue boiling.
Steam may accumulate inside the Body, resulting in breakdown, water leakage, or scalding.

POUR HOT WATER

Wait until boiling completes to pour hot water.


After confirming that the Boil Light has turned off

① Remove the Body from the Power Base by holding the Handle, press the Lock Button to unlock it, and then slowly tilt the Body to pour hot water.

- This product is designed to turn OFF when steam is detected. Steam may become water droplets and leak from the Bottom of the Body, but this is normal. This will also not result in breakdown, so you can use it without worry.

To pour

Press the Lock Button to unlock it.

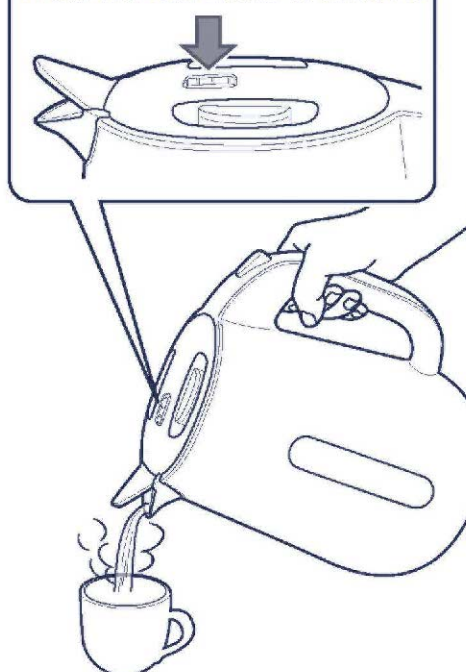

CAUTION


Please follow the instructions below when pouring to reduce the risk of scalding:

- Do not touch the Receptacle.
- Beware of the hot water and steam that come out of the Spout.
- Do not tilt suddenly.
- Do not press the Lock Button while pouring. (Hot water can spurt out.)
- Avoid contact with the Lid Lock when pouring.

NOTE

- Do not detach or reattach the Upper Lid a while after the water is finished boiling. (Hot water may splash out when pouring.)

② When you have finished pouring the hot water, return the Body to an upright position and press the Lock Button again to lock the Spout.

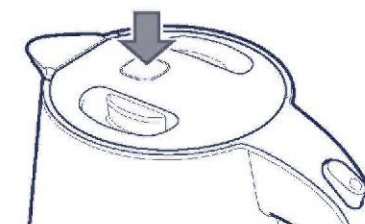

- There may be a click sound a while after using the product. This is the sound generated when the heated Sensor cools down, and this is normal. You can use it without worry.

NOTE

- Do not tip over, tilt, or shake the product even when the Spout is locked. If the product tips over, do not put your hand or other body parts near the Spout when standing up the product. (Hot water or steam may come out of the Spout resulting in scalding.)
- Unplug the Power Plug from the outlet after using the product. Take special precautions with children and infants. (Not doing so may cause injuries or electric shock.)
- When returning the Body to the Power Base, make sure the Power Switch is in the OFF position before returning.

DISPOSE OF WATER

Discard left over water after each use, emptying the Inner Container completely.

① Detach the Upper Lid. (see pg.6)

CAUTION

Hot water that has accumulated on the inside of the Upper Lid may come out of the Spout or Steam Passage Gasket. (May result in scalding.)

② Hold the Handle and tilt the Body slowly to dispose of the remaining hot water from the Water Removal Area.

CAUTION

Disposing of hot water from a different position may cause hot water to enter inside the Body, resulting in breakdown.


NOTE

- Do not hold the Power Plug/Connector with wet hands. (This may cause short circuit or electric shock.)
- When detaching the Upper Lid, be careful not to get drips from the Spout or the inside of the Upper Lid on your hands. (May result in scalding.)
- Be careful not to splash hot water on the Power Switch, Receptacle, or Connector. (This may cause scalding and breakdown.)
- Discard left over water after each use. (This may cause scales to attach and smells.)

NOTE

- Wipe off any remaining water droplets around the Water Removal Area. (This may cause water to drip from the Body.)


Water droplets

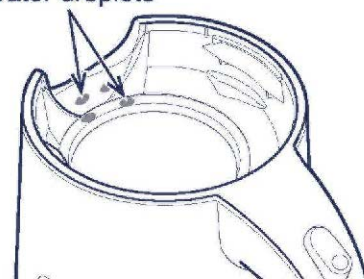

CAUTION

When discarding hot water, be careful with hot water or steam to avoid scalding.

Water Removal Area

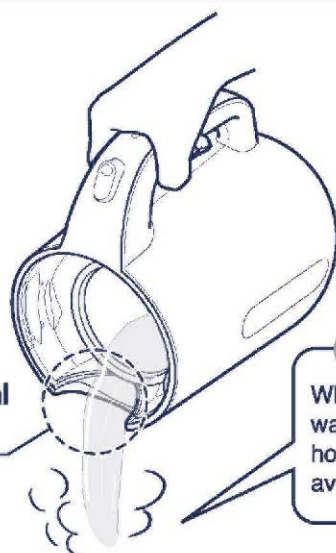


AUTOMATIC SHUT-OFF FUNCTION

When the Power Switch is pressed while the Inner Container is empty, the Automatic Shut-Off Function is activated to prevent accidents due to overheating, and the product automatically switches OFF. (The Boil Light turns off.)

Remedy

Turn the Power Switch OFF, remove the Body from the Power Base, and let the Inner Container cool down sufficiently before filling it with water and boiling water again.

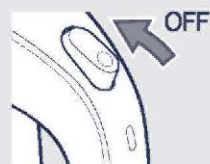

CLEANING AND MAINTENANCE

Always unplug the Power Plug, dispose of all water, and allow the product to cool completely before cleaning.

NOTE

- Do not attempt to dry the product by turning it upside down when the Bottom is wet. (Water may get inside the body and cause it to break or rust.)
- Do not use the following:
 - Thinner and bleach. (Doing so may cause discoloration, crack, degradation and corrosion.)
 - Polishing powder, nylon brushes, anything made with metal, eraser pads, hard nylon sponges and abrasive cleaners. (Doing so may cause damage to the surface.)
 - Detergent. (Hot water may spill out, resulting in scalds. Doing so may cause unwanted odor.)
- When using chemically treated cloths, do not rub too hard or leave them on the product for a long time as the surfaces of the product may be damaged by chemical reactions.
- Do not use a dishwasher or dish dryer for cleaning or drying. (Doing so may cause the plastic parts to deform.)
- Before storing the product for a longer period of time, dry it completely and pack in a plastic bag to prevent odors from being absorbed.
- Do not wash the Upper Lid, Body, or Power Base.

Upper Lid/Body/Power Base

Wipe clean with a well-wrung soft cloth.

- Do not wash. Do not splash water on the Power Switch, Receptacle, or Connector. (Water will get inside and cause breakdown and rust.)

Sensor Cover

Remove dirt with a cotton swab.

(After wiping the Sensor Cover with a moist cotton swab, wipe it with a dry cotton swab for best results.)

- Do not press in the Sensor Cover or allow foreign matter to attach to it. (Steam may leak if the Sensor Cover changes shape, and the Sensor may not work properly.)

Valve

Remove dirt with a cotton swab.

- Do not pull or apply force to the Valve. (Steam and water may leak if the Valve changes shape.)

Inner Container

Perform the Citric Acid Cleaning (see pg.12) periodically



Especially when...

- Red rust spots (Rust Stain) is visible on the Inner Container.
- Milky white or black discoloration and/or filmy objects are found in the water.
- Boiling is louder than usual.
- Hot water has an odor.

(The condition of the Inner Container will vary depending on the water quality and frequency of use.)

Inner Lid

Wipe with a soft wet sponge.

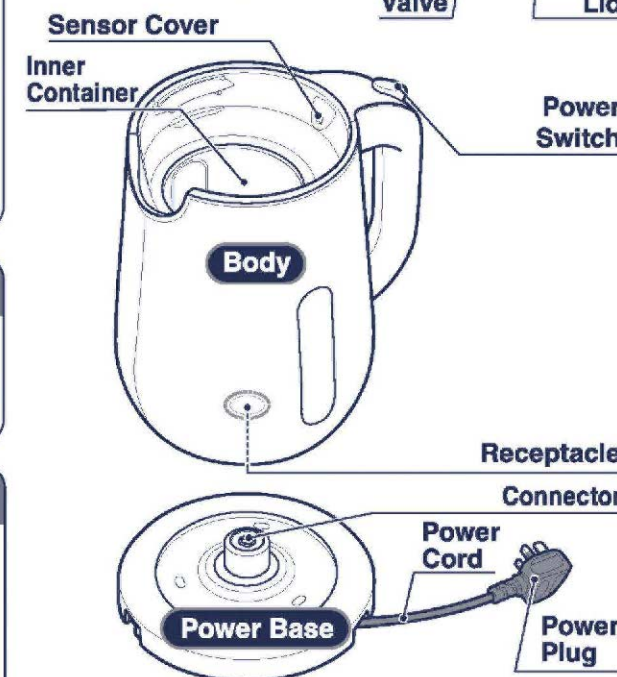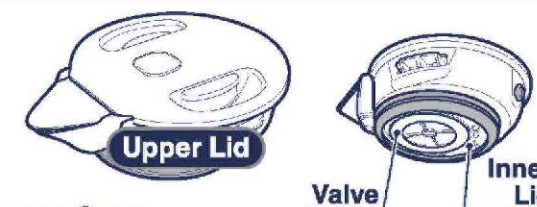

Receptacle/Connector/Power Cord/Power Plug

Wipe clean with a soft dry cloth.

Perform every 1-3 month(s) of usage

HOW TO PERFORM CITRIC ACID CLEANING

In order to prevent gas bubbles and bubbling-over, the Citric Acid Cleaner for Electric Water Boilers (CD-K03E-JU) is recommended for cleaning. (sold separately) (see pg.13)

Do not drink the water used for citric acid cleaning.

1 Put 30g of citric acid or CD-K03E-JU in a cup and add warm water to dissolve. Pour it into the Inner Container and fill with water to the Maximum Water Level Line.

2 After attaching the Upper Lid and connecting the Power Plug, press the Power Switch to boil the water, and leave it for about 2 hours.

3 Discard the hot water with the Upper Lid detached.

4 Fill only with water and attach the Upper Lid. Boil the water, press the Lock Button to unlock the Spout, and discard the water from the Spout. (This is to rinse the Inner Container and the Inside of the Spout.)

NOTE

- Do not fill over the Maximum Water Level Line. (Hot water may spill out, resulting in scalds.)
- Repeated citric acid cleaning might be necessary for hard-to-remove residues.

When disposing of hot water:

- Take precaution with the hot water and steam. (You may scald yourself.)
- If mineral or alkaline ionized water is used, the ingredients in the water (minerals) tend to build up on the surface of the Inner Container. If scale accumulates on the Inner Container, boiling may become louder than usual. Frequent cleaning is recommended when using mineral or alkaline ionized water.

HOW TO REPLACE THE INNER LID GASKET

The Inner Lid Gasket may need to be replaced due to time and wear. Check it about once a year.

Wipe new Inner Lid Gaskets with a wet soft sponge before attaching to the Inner Lid.


When the Inner Lid Gasket hardens, changes shape, turns white, or otherwise becomes worn out.

Please purchase and replace with a new one.

If the Inner Lid Gasket hardens, changes shape, turns white, or otherwise becomes worn out, hot water may leak from the gap between the Upper Lid and Body when tilted or tipped over accidentally, resulting in scalding. Steam may also leak from the gap, causing scalding and product failures. If hot water spews from the gap or there is steam even after replacing the Inner Lid Gasket, other parts may be in need of repair. Make any inquiries to the retail store where you purchased this product.

To remove the Inner Lid Gasket

Hold the Upper Lid securely then remove the Inner Lid Gasket.

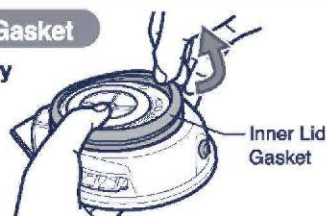

Inner Lid Gasket


NOTE

- Do not disassemble the Upper Lid.
- Do not remove any parts from the Upper Lid other than the Inner Lid Gasket. (Doing so may cause hot water to spill out, resulting in scalding.)
- Do not strongly pull the Inner Lid Gasket. (Doing so may cause damage.)

To attach the Inner Lid Gasket

1 Fit the Inner Lid Gasket to the outer circumference of the Upper Lid.

2 Press in all fringe of Inner Lid Gasket as illustrated to securely fit.

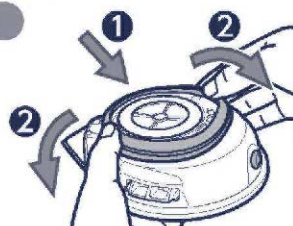


Cross-sectional drawing

Inner Lid Gasket

Be sure that the Inner Lid Gasket is securely fit.



The Inner Lid Gasket is securely fit.

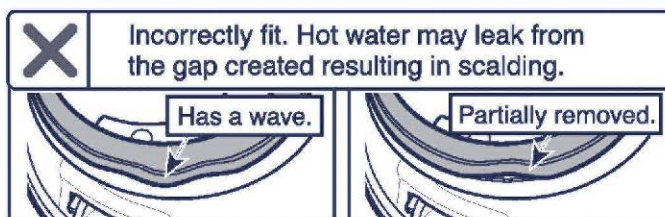

Incorrectly fit. Hot water may leak from the gap created resulting in scalding.

Has a wave.

Partially removed.

REPLACEMENT PARTS

- Replacement parts may be available for an additional charge. Please replace damaged parts only with new parts.
- When replacing parts, please record the model number and part name beforehand, then contact the retail store where you purchased this product.

Part Name	Part Number
Inner Lid Gasket	BF439020M-00
Citric Acid Cleaner for Electric Water Boilers (30gx4 packets)	CD-K03E-JU

Q&A ON PRODUCT USE

Is it okay to use the product for heating liquids other than water?	Do not fill the product with any liquid other than water. Doing so may cause the liquid to splash out resulting in scalding, or may cause malfunction.	pg.2
Does the water need to be changed every day?	To prevent scale from building up on the surface of the Inner Container, please change the water after use. Not doing so may cause boiling sound to become louder than usual and the water to have an odor.	pg.10
Is it okay to use mineral water or alkaline ionized water?	Yes. However, when mineral or alkaline ionized water is used, a floating residue may develop or milky white substance may form on the surface of the Inner Container. This is due to the ingredients in the water (minerals) and is harmless to your health. Frequent cleaning is recommended.	pg.7 pg.12
I accidentally drank water while performing the Citric Acid Cleaning. Is this harmful to my health?	Please follow the instructions shown on the package of the citric acid cleaner CD-K03E-JU.	

TROUBLESHOOTING GUIDE

Please check the following points before calling for service.

Condition	Cause	Remedy
Power does not turn on. Boil Light does not turn on.	Power Plug is not connected to an electrical outlet.	Connect the Power Plug.
	The Body is not set correctly on the Power Base.	Set it correctly.
	The Power Switch is not pressed.	Press the Power Switch.
	Metal flakes or dusts have accumulated on the Connector.	Remove metal flakes or dusts.
The Power Switch is inoperable.	The Inner Container is not sufficiently cool. The Automatic Shut-Off Function may be activated.	Turn the Power Switch OFF, remove the Body from the Power Base, and allow the Inner Container to cool down sufficiently before filling it with water and boiling water again.
	The Power Switch is pressed immediately after the water is finished boiling.	Allow the product to cool sufficiently before use.
Even if the Power Switch is pressed, the power switches OFF after a while and the Boil Light turns off.	The water is not filled in. The Automatic Shut-Off Function must have activated.	Turn the Power Switch OFF and let the Inner Container cool down sufficiently before filling it with water and boiling water again. (see pg.10)
The water starts boiling as soon as the Body is placed on the Power Base.	The Body is placed on the Power Base with the Power Switch in the ON position.	Make sure the Power Switch is switched OFF and place it on the Power Base.
The water does not completely boil.	The Upper Lid is detached.	Securely attach the Upper Lid.
	The Lock Button is unlocked.	Lock the Lock Button.

TROUBLESHOOTING GUIDE (Cont.)

Condition	Cause	Remedy
Hot water pours out from the Spout.	Check that the Inner Container is not filled over the Maximum Water Level Line.	Pour out the excess water until it is below the Maximum Water Level Line.
A filmy, floating residue is noticeable.	Residue is due to the mineral content in water, not from corrosion of the Inner Container.	Perform citric acid cleaning. (see pg.12)
Milky white and rough-surfaced objects have built up on the surface of the Inner Container.	This is due to the ingredients in the water (minerals) and leaving scales accumulated on the surface of the Inner Container, boiling may become louder than usual.	Scale Over time and use, calcium and other minerals contained in water build up on the surface of the Inner Container. It is called "scale" and is harmless to your health.
Boiling is louder than usual.		
Red or gray rust-like spotting appears on the Inner Container surface.	Caused by iron in the water, not deterioration of the Inner Container.	
The outside of the Body becomes very hot.	●Do you continue to press the Power Switch to force the water to continue boiling? If you force it to continue, the outside of the Body may become hot or water droplets may drip from condensation inside the Body. Do not continue to press the Power Switch.	
Water droplets are dripping from the bottom of the Body.	●This product is designed to turn OFF when steam is detected. Steam may cause condensation on the Power Switch or water droplets to drip from the bottom of the Body, but this is normal. This will also not result in breakdown, so you can use it without worry.	
The outside of the Body becomes hot.	●When the water temperature and/or room temperature is high, the outer surface of the Body may reach up to 60°C. This is not a malfunction.	
The Power Cord becomes hot.	●The Power Cord may become hot while the water is boiling. This is not a malfunction.	
There is a light sound when pouring, detaching or attaching the Upper Lid.	●This sound is normal and comes from the movement of the weight which prevents hot water from overflowing when the product is overturned.	
There is a click a while after the water is finished boiling.	●The sound is generated when the heated Sensor cools down, and this is normal.	
Replacement for the Upper Lid	Inner Lid Gasket	●The Inner Lid Gasket is expendable, and we recommend that you replace it about once a year. If steam leaks from the gap between the Upper Lid and the Body, or if the Inner Lid Gasket hardens, changes shape, turns white, or otherwise becomes worn out, please replace it. (see pg.12)
	Plastic Parts	●The plastic part of the Upper Lid may deteriorate over use. If discoloration occurs or the surface becomes coarse, replace the Upper Lid (must purchase separately). (We take care in only using materials for the plastic parts that are safe and hygienic for food contact.)
The Inner Container may become damaged over use. Contact the retail store where you purchased this product.		


SPECIFICATIONS

Model No.	CK-VAQ15
Capacity	1.5 liter
Rating	AC 220-230 V 50/60 Hz
Electric Consumption	1190-1300 W
Length of the Power Cord	0.7 m
External Dimensions (approx. cm)	22.5 (W) x 16.5 (D) x 24 (H) (Not including the Power Base)
	22.5 (W) x 16.5 (D) x 26 (H)
Weight	Approx. 1.0 kg (Not including the Power Base)
	Approx. 1.3 kg

- In high altitudes or severely cold areas, the product may not perform as specified. Avoid using the product in such areas or in other extreme conditions.
- This product is not suitable for use in countries or regions with different power supply voltages or frequencies.

How to change the Fuse

1. Open the Fuse Cover of the Power Plug.
2. Remove the Fuse installed inside.
3. Install a new Fuse on the Fuse Cover and fit back it to the Power Plug.
(Be sure to replace with a Fuse of the same current value as the installed Fuse.)

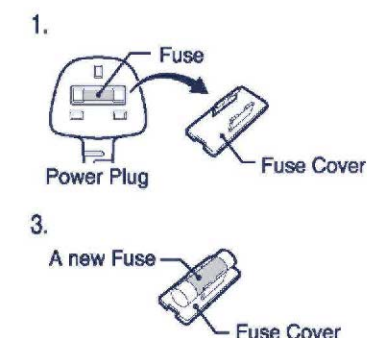

[illegible]